

BTM-KNX

BUS PORT FOR KNX SYSTEM

Bus port for KNX system required for connecting a **INT-KNX** module to KNX bus.

